

ASSEMBLY INSTRUCTIONS

Frontgate® Holiday Collection

#146619 - Deluxe Classic 30in Cordless Wreath


<u>Parts List</u>	<u>Quantity</u>	<u>Tools Required</u>
Pre-lit Wreath	1	
Battery Box (3 D batteries not included)	1	

Unpack: Carefully remove the wreath from the carton, and keep carton for future storage. Be sure to untangle any wires that may be caught (Please DO NOT forcibly remove the wreath). Remove any outer wrapping.

Shape and light the wreath:

To fully enjoy your wreath and make it look its best, it may require some shaping after unpacking. Please follow the instructions below (We suggest unplugging the wreath and wearing protective gloves).

- 1) Place the wreath on a flat surface. Straighten and separate all branch tips. To achieve maximum fullness, tips should not touch one another.
- 2) From back of the wreath, find the Battery box, open the Battery box and insert 3 D cell batteries, then close the Battery box. (see Figure A,B,C,D&E).
- 3) Each Battery Box is featured with a 3-position switch: On – Off – Timer. The timer enables the LED lights to remain on for 6 hours, then off for the next 18 hours. This will repeat daily.(see Figure F)

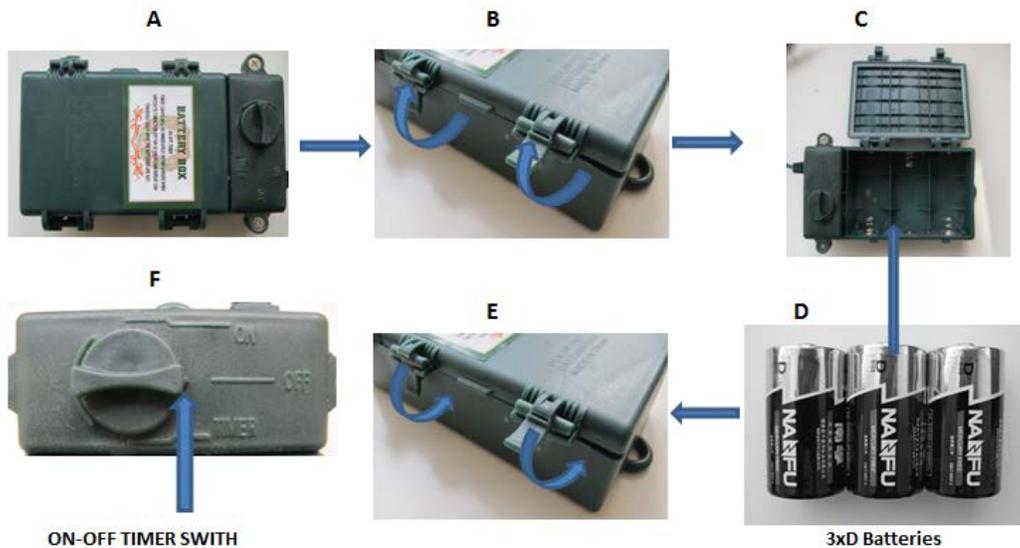

ON-OFF TIMER SWITCH

3xD Batteries

Trouble Shooting Light Problems:

- 1) Check power – be sure that the batteries placed well.
- 2) Check Switch: if it is set on Timer

Storage:

- 1) Take out the batteries from the battery box and remove any ornaments or decorations.
- 2) Turn outer branch tips clockwise to reduce the overall size and assist in re-packaging.
- 3) Place the wreath in the box and secure it. Do NOT store wreath in a damp area or in an area where the temperature exceeds 100°F.

Please contact one of our Product Specialists for assembly assistance or questions at 1-800-537-8484 or e-mail to ps@frontgate.com. Specialists are available weekdays 8:00AM to 8:00PM EST or Saturdays 9:30AM to 6:00PM.