

Item# 148331 LED-LIGHTED JEWELLED MAGNESIUM NUTCRACKER WITH MOVEMENT & MUSIC This animated nutcracker is hand-painted and has synchronized motion, LED lights and music. IMPORTANT SAFETY INSTRUCTIONS READ AND FOLLOW ALL SAFETY INSTRUCTIONS • Product is intended for INDOOR or COVERED OUTDOOR use only. • Transformer is intended for INDOOR or COVERED OUTDOOR use only. • Do not use product outdoors unless product is placed in a secure area that is completely covered. Do not expose product to sun, rain or other elements. • Do not mount or place the product near gas or electric heaters, fireplaces, candles or other similar sources. • Keep the product well ventilated. Do not cover product with cloth, paper or any material not part of the product when in use. • Use only with the indoor transformer that is provided. • Do not leave product unattended when children are present and do not allow children to play on/near Santa or transformer. • Unplug the product when leaving the house and when unattended. Do not leave product plugged in overnight if unattended. • Never operate the product if it has a damaged cord or plug. If the external flexible cable or cord of the transformer is damaged DO NOT USE THE TRANSFORMER. DO NOT OPEN TO REWIRE! THROW TRANSFORMER AWAY. • Do not use this product for any purpose other than its intended use. • Do not secure wiring of the product with sharp hooks or nails. • Not intended for permanent installation. • This is an electric product -not a toy! To avoid risk of fire, burns, personal injury and electric shock, follow all requirements listed above. 1	CARE AND MAINTENANCE: • Before using or reusing, inspect product carefully. Discard any product that have cut, damaged or frayed wire insulation or cords, or exposed copper wire. • When not in use, store neatly in a cool, dry location protected from sunlight. • Reminder: The LED lights on the product are not designed to be replaced. ASSEMBLY INSTRUCTION: Hand Assembly: Locate notch on the inside of hand with drumstick. Locate corresponding raised area on the arm. Place hand on arm by lining up as shown in image below. Hand inner post will fit into opening on arm. Make sure left hand is placed on left side – right is placed on right side. Power Operation: On/Off knob is located on the side of the drum. Turn On/Off knob to the right to turn on the nutcracker. Use the same knob to control the volume of the music by turning the knob to the right (increased volume) or left (decreased volume). Turn On/Off knob completely to the left to turn off the nutcracker. Nutcracker will have motion and play music for 6 continuous hours after being turned on. After 6 hours, the nutcracker will automatically power off. 2	Timer Operation: Nutcracker will play music for 6 hours after being powered on. After 6 hours, the nutcracker will automatically power off. To re-activate nutcracker, press the Timer button above the On/Off knob and nutcracker will operate for another 6 hours. Alternatively, simply turn the knob to the left “Off” position and then turn it to the right “On” position to reactivate motion and music for 6 additional hours. Assembly of Cord: Assembly of cord is required to plugging in to the wall. (See sketches below.) Step 1: Insert 2-prong end into adapter – lining up the holes. Step 2: Once inserted, slide collar up (see right sketch) and screw in to place securing cord to adapter. Step 1 Step 2 Nutcracker is now ready to plug in and operate. Nutcracker should be plugged in to a standard 120V outlet. Transformer used on the item: Model No.: GPU481201300WAOO AC ADAPTER INPUT: 120VAC 60Hz 28W OUTPUT: 12VAC 1300mA TROUBLESHOOTING: If the product does not light up: 1. Make sure the transformer is connected to a power supply. 2. Make sure the product is properly connected to the transformer. • Do not force positions of hands – components must be aligned properly. • Do not block movement of hands. 3	FCC Instructions: The modifications not approved by the party responsible for compliance could void the user’s authority to operate the equipment. “Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.” FCC Marking: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation Company Name: New Starco Enterprises Limited SAVE THESE INSTRUCTIONS! Please contact one of our Product Specialists for assembly assistance or questions at 1-800-491-4958 or ps@grandinroad.com. Specialists are available weekdays from 8:00 AM – 8:00PM EST or Saturday 9:30 AM to 6:00PM. 4
---	--	--	--