
grandinroad

Product Specialist: 800-491-4958
Online: www.grandinroad.com

GR Product Name: Shrieking Yard Spider
GR Product Number: 183999
Assembled Dimensions: H51.1" X W86.6" X D70.8"

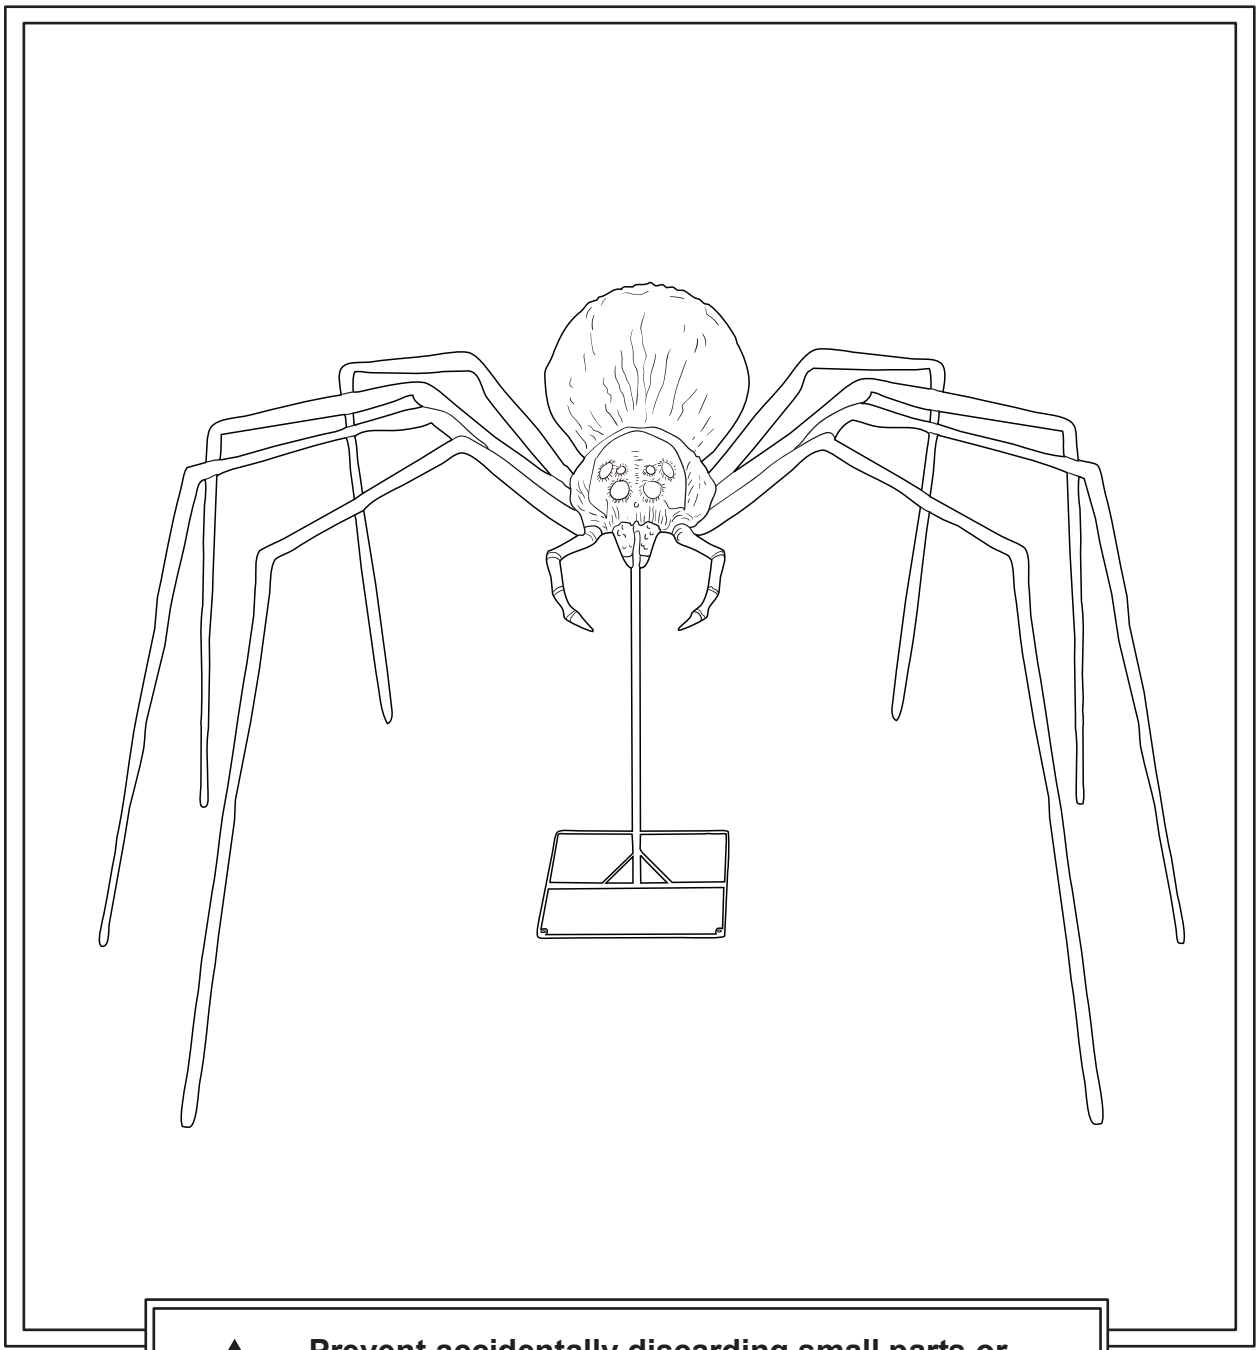

Prevent accidentally discarding small parts or hardware. Retain all carton contents until assembly and installation are complete.

PRODUCTS ARE NOT INTENDED
FOR COMMERCIAL USE.

MADE IN CHINA


UPDATED: (18/3/2025)

⚠ Assemble in location for intended use.

Two person assembly suggested.
Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

ASSEMBLY TIME: 30 Minute


Ltr.	Qty.	Components
A	1	
B	1	
C	1	
D	1	
E	8	
F	8	
G	16	
H	8	
I	4	
J	1	

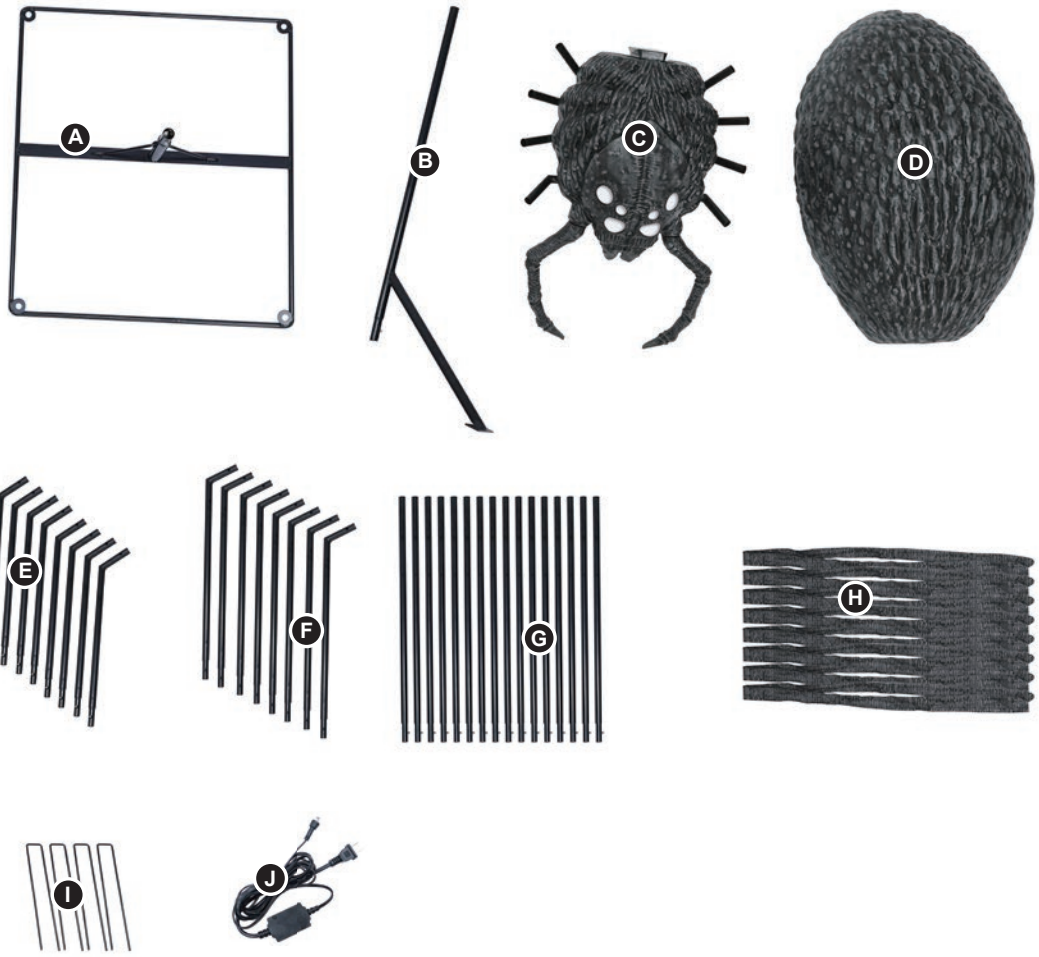

PARTS LIST

A. Base
B. Support Pole
C. Head
D. Body
E. Upper Leg Poles
F. Middle Leg Poles
G. Lower Leg Poles
H. Leg Covers
I. Stakes
J. Adapter
Input: 120V AC 50/60Hz
Output: 5.9V 1.5A


STEP 1: NOTE: Throughout the instructions, left and right are from the character's point of view.
Attach the (B) Support Pole tot he (A) Base using the available quick connect push button and pre-drilled hole as shown in Figure 1. Attach the (C) Head to the (B) Support Pole using the available quick connect push button and pre-drilled hole as shown in Figure 2.

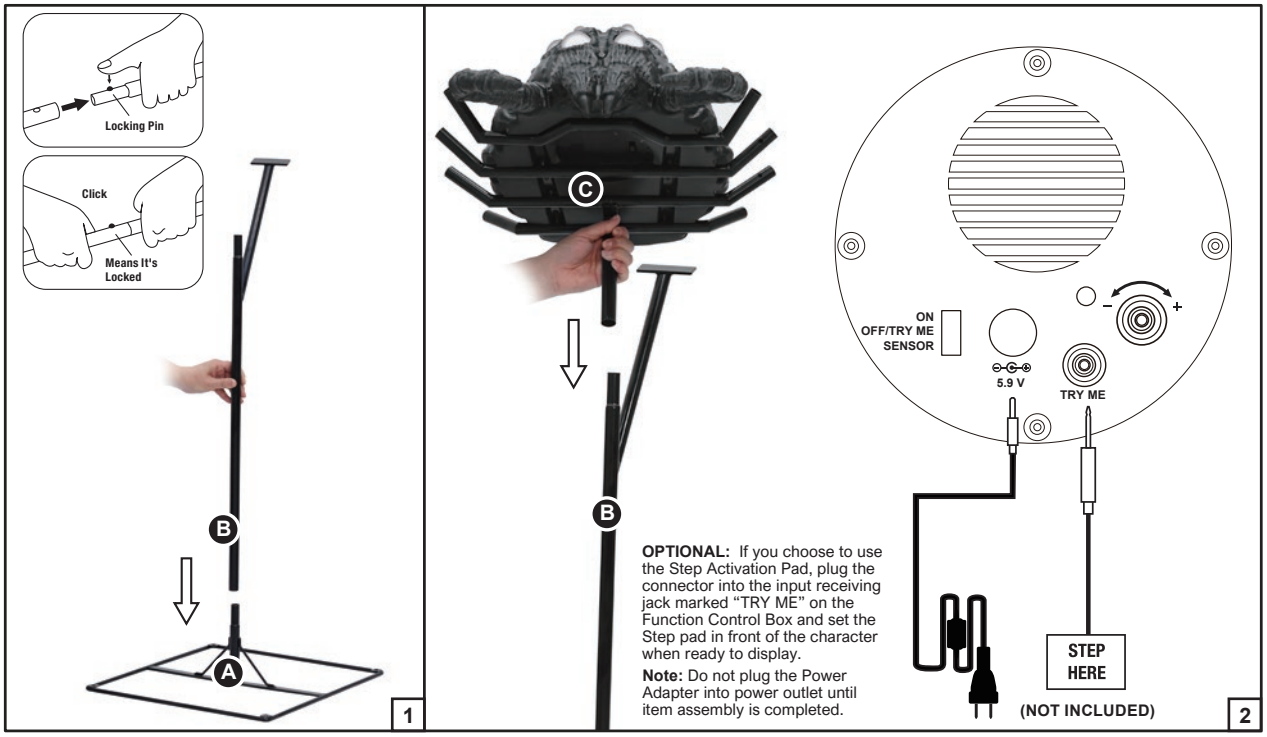


STEP 2: Attach (D) Body to the (C) Head as shown in Figure 1. Then connect all the (E) Upper Leg Poles to the (C) Head using the available quick connect push buttons and pre-drilled holes as shown in Figure 2.




STEP 3: Attach all the (F) Middle Leg Poles to the (E) Upper Leg Poles using the quick connect push buttons and pre-drilled holes as shown in Figure 1. Assemble 2 pieces each of the (C) Lower Leg Poles, to form lower legs as shown in Figure 2, then connect all 8 assembled Lower Legs to the (E) Middle Leg Poles using the quick connect push buttons and pre-drilled holes as shown in Figure 3.

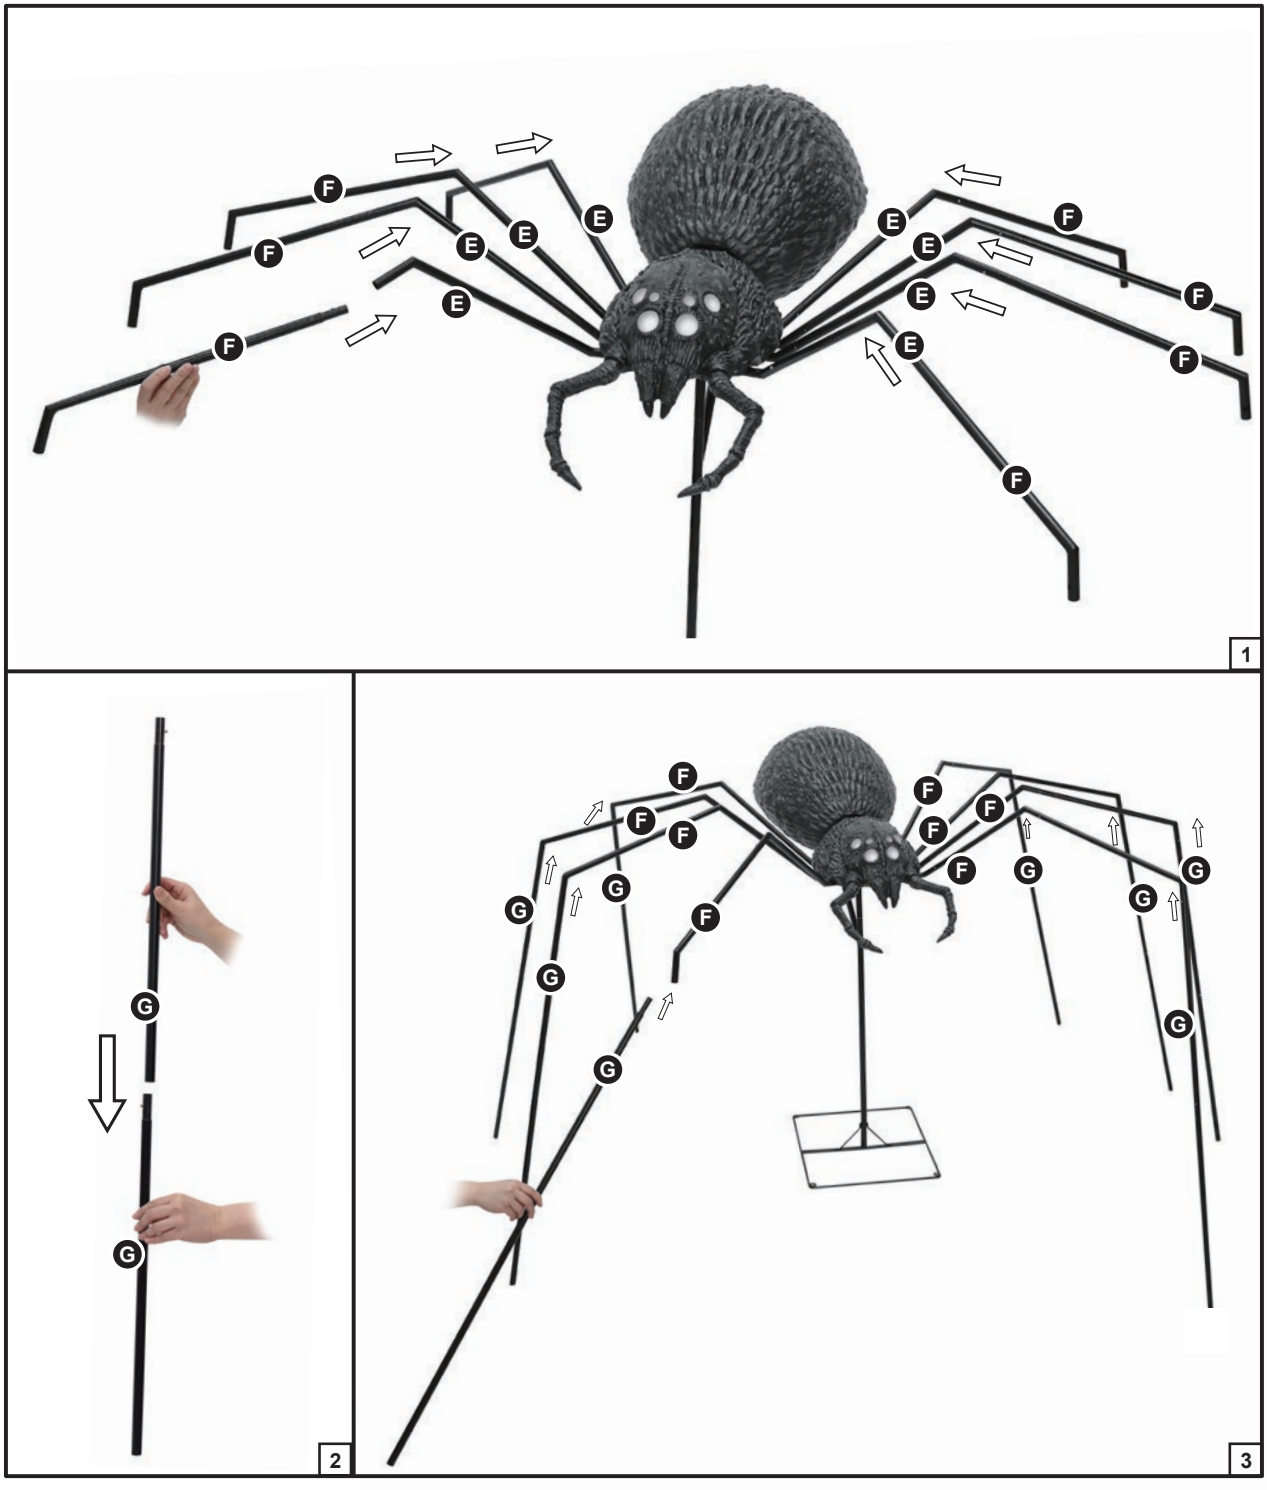


STEP 4: Slide all 8 of the (H) Leg Cover one by one up to each of the assembled legs as shown in Figure 1. If your prop is placed on a soft-flat ground, for added stability you can use the provided (I) Stakes, pressing them into the ground on the 4 corners of the (A) Base as shown in Figure 2.

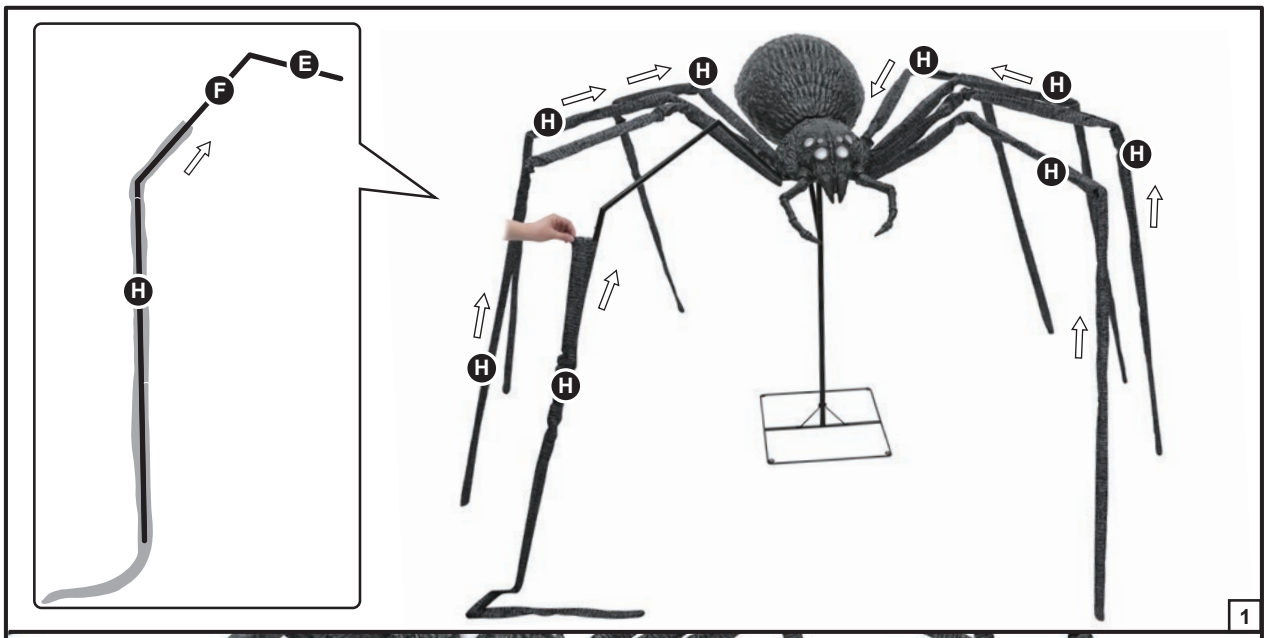

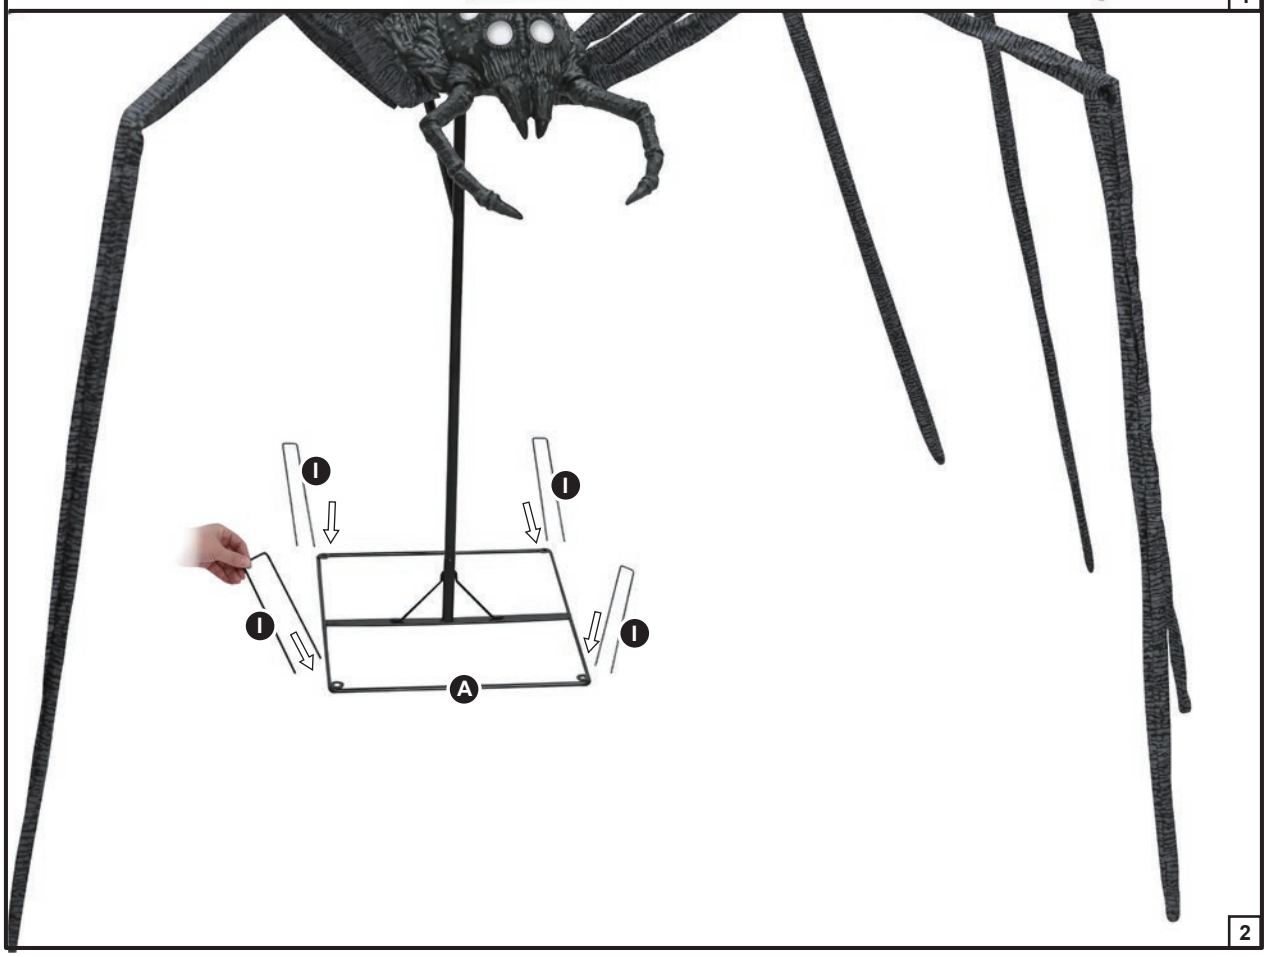

STEP 5: Your Shrieking Yard Spider is now fully assembled. Turn on and let the fun begin!

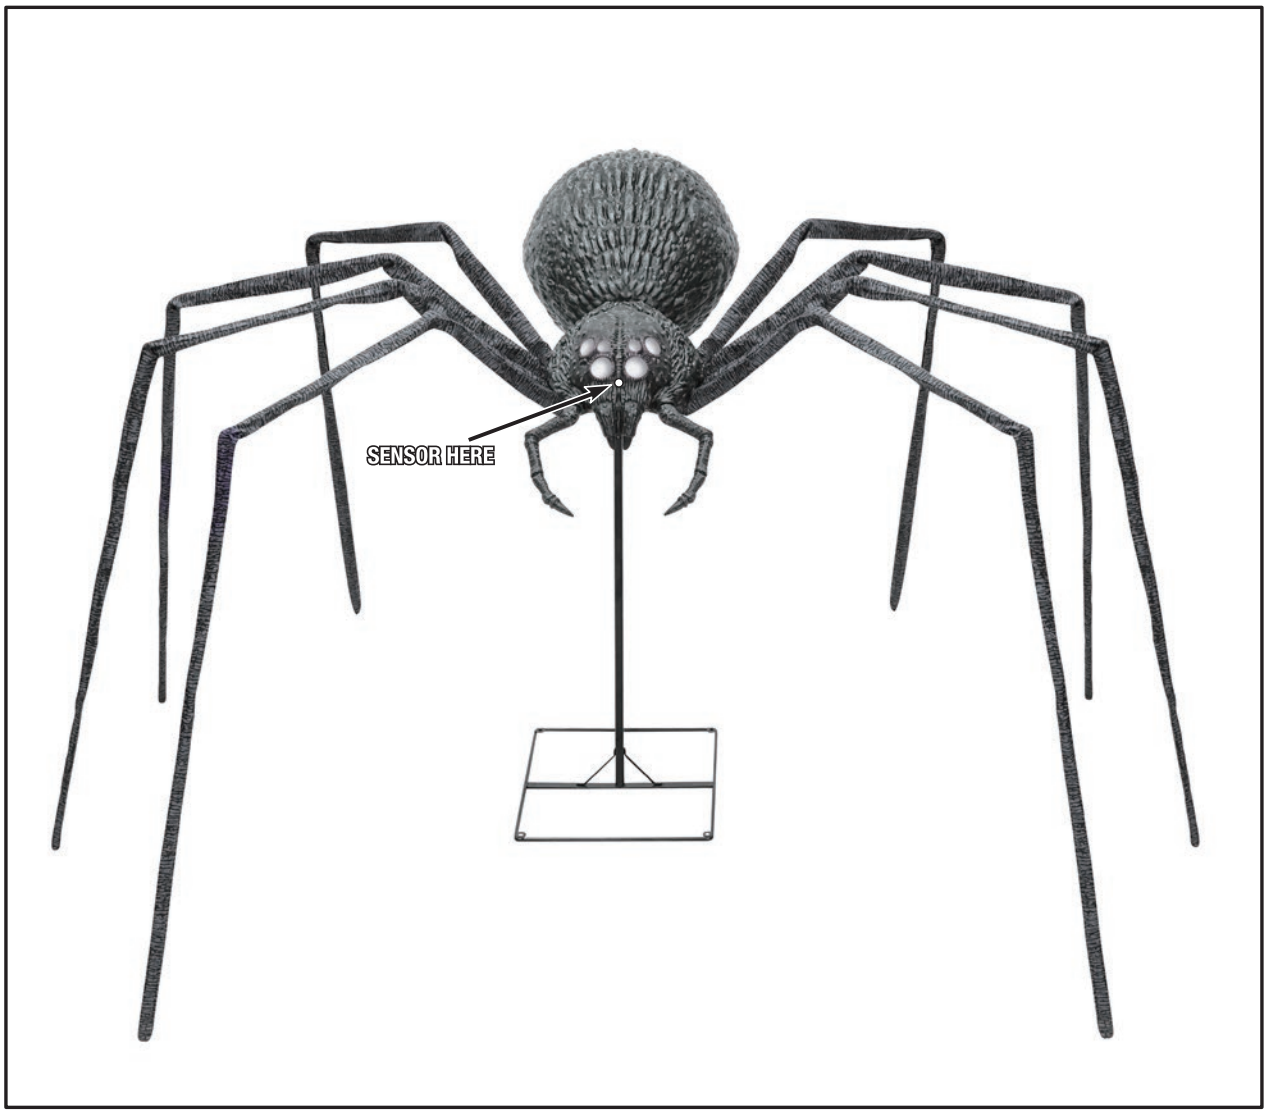


OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (C) Head, as desired.

2. Settings:

ON	This switch mode will continually operate the lights and sound of the item.
OFF/TRY ME	This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Not Included). The item will operate for one activity cycle with each Try Me activation.
SENSOR	This switch mode will activate lights and sound when the Infra-red (IR) sensor is activated and will operate for one activity cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
	**VOLUME:** Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

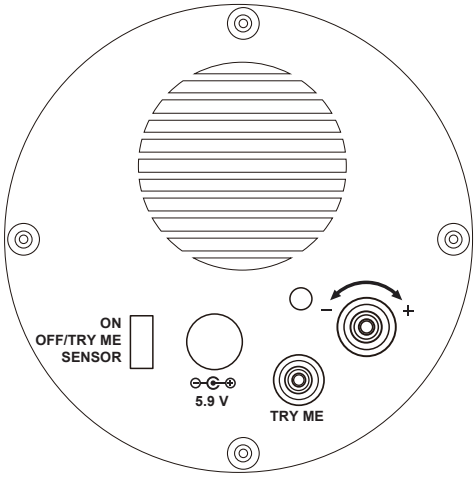

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

Warning

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard.
Keep all plastic and wire parts away from children.
1. Please use the adapter supplied by the manufacturer.
2. Please assemble the item according to the instructions. Connect all wires according to their matching color.
3. Children should be supervised by adults. The item should not be grabbed, as it becomes a tipping hazard. Keep away from the adapter, as it heats up during operation.
4. If displaying on a slope, we recommend you add weights to the base for better stability.

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

THIS IS NOT A TOY.
FOR INDOOR AND OUTDOOR USE.

Responsible party for FCC SdoC:
Seasonal Visions International, Berkeley, CA 94710 USA
CUSTOMERSERVICE@SVICHINA.COM

Please contact one of our Product Specialists for assembly assistance or questions at 1-800-491-4958 or email ps@grandinroad.com. Specialists are available weekdays 8:00am to 8:00pm EST or Saturday 9:30am to 6:00pm.