




Product Specialist: 1-800-491-4958

Online: www.grandinroad.com

GRProduct Name: CORRIE TALL CABINET

GR Product Number: 180589BLW

Assembled Dimensions: 32"(L) X 18"(W) X 60"(H)

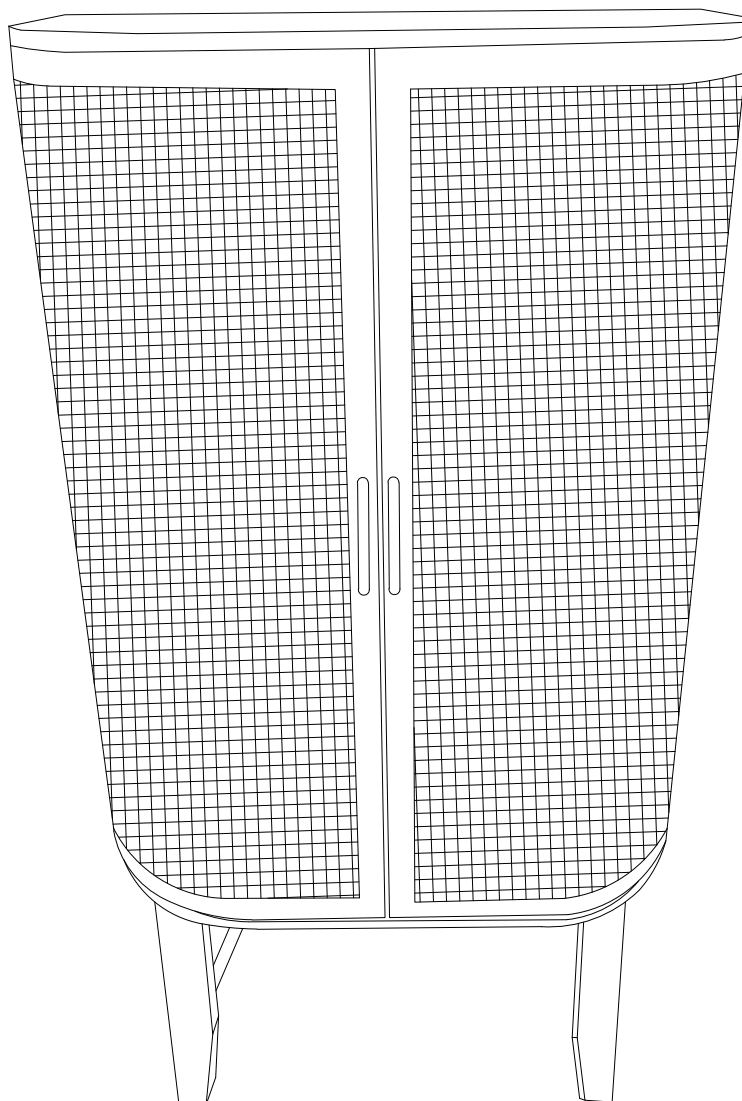

Prevent accidentally discarding small parts or hardware. Retain all carton contents until assembly and installation are complete.

PRODUCTS ARE NOT INTENDED
FOR COMMERCIAL USE.


UPDATED: 28-3-24





MADE IN INDIA
PAGE 1 OF 7




 Assemble in location for intended use.

-Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

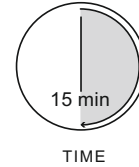


Ltr.	Qty.	Hardware Included
A	1	 Allen key 6 mm
B	4	 Allen bolt 8x50 mm
C	4	 Lock washer 8x20 mm
D	4	 Flat washer 8x22 mm

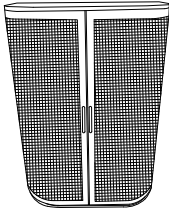
Ltr.	Qty.	Components
E	1	 Cabinet
F	2	 Legs
G	1	 Shelf




STEP1:Place the cabinet (E) on a soft and clean surface Backside down.

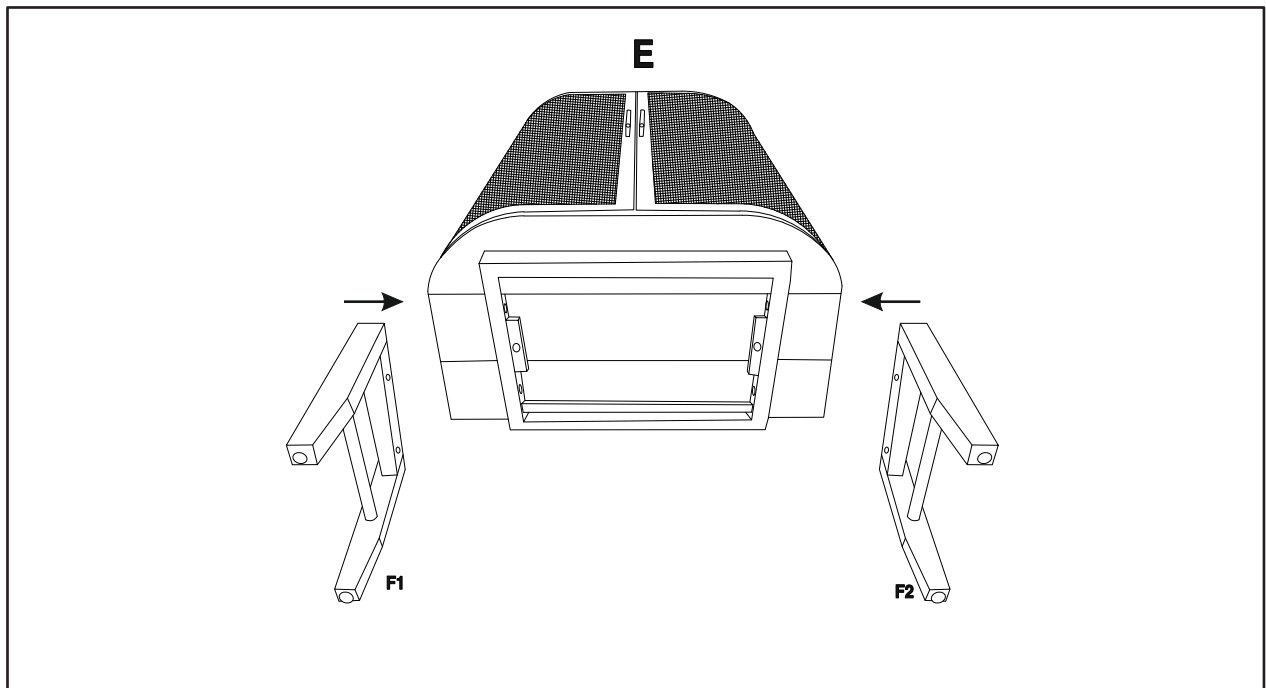


STEP2:Place each of the legs (F) on interior of cabinet top frame and align the holes between legs and the frame. Using key (A) tighten bolt (B), lock washer (C) and Flat washer (D) as shown in the reference picture.

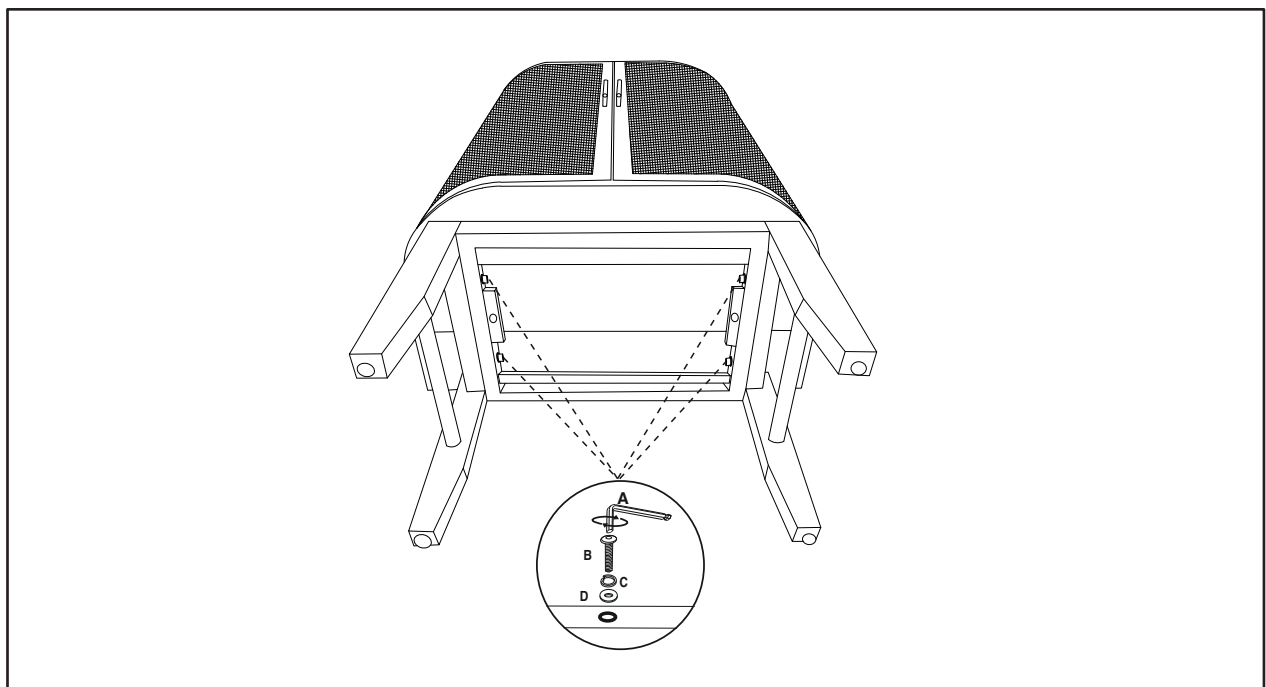


STEP3: Turn assembled cabinet up.

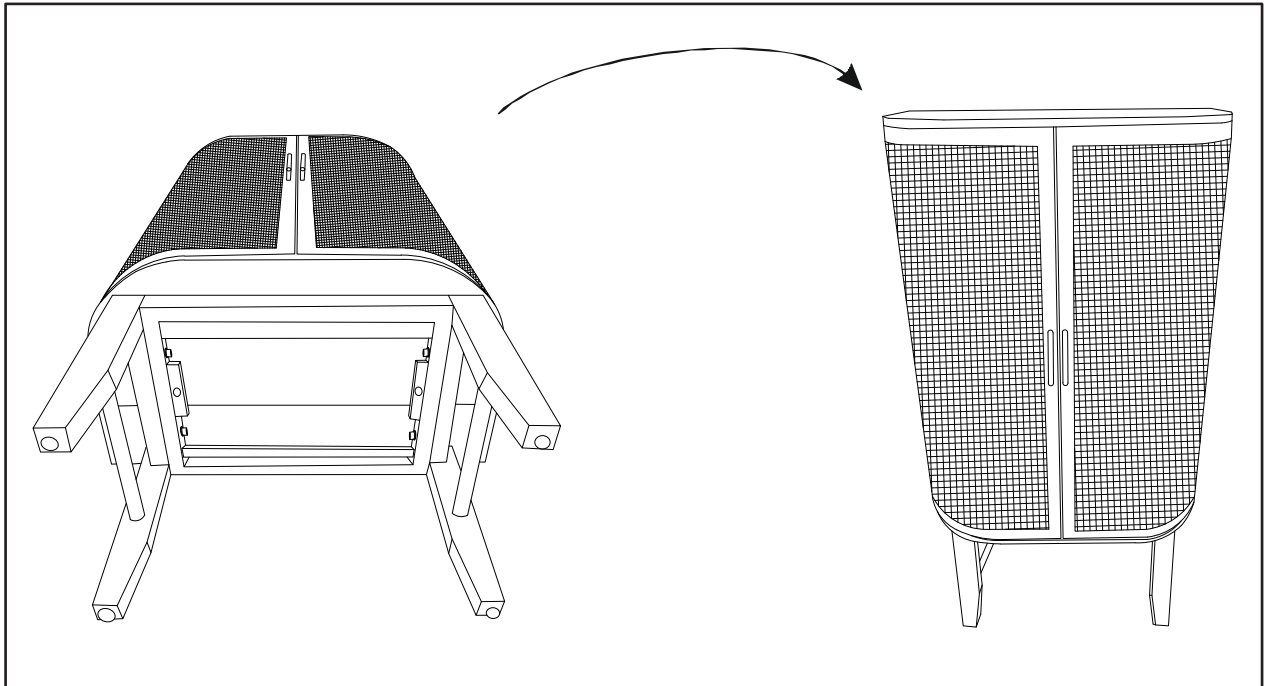

STEP4: with product on leveled surface, gently slide the shelf from front side (G) inside the Cabinet (E) as illustrated.

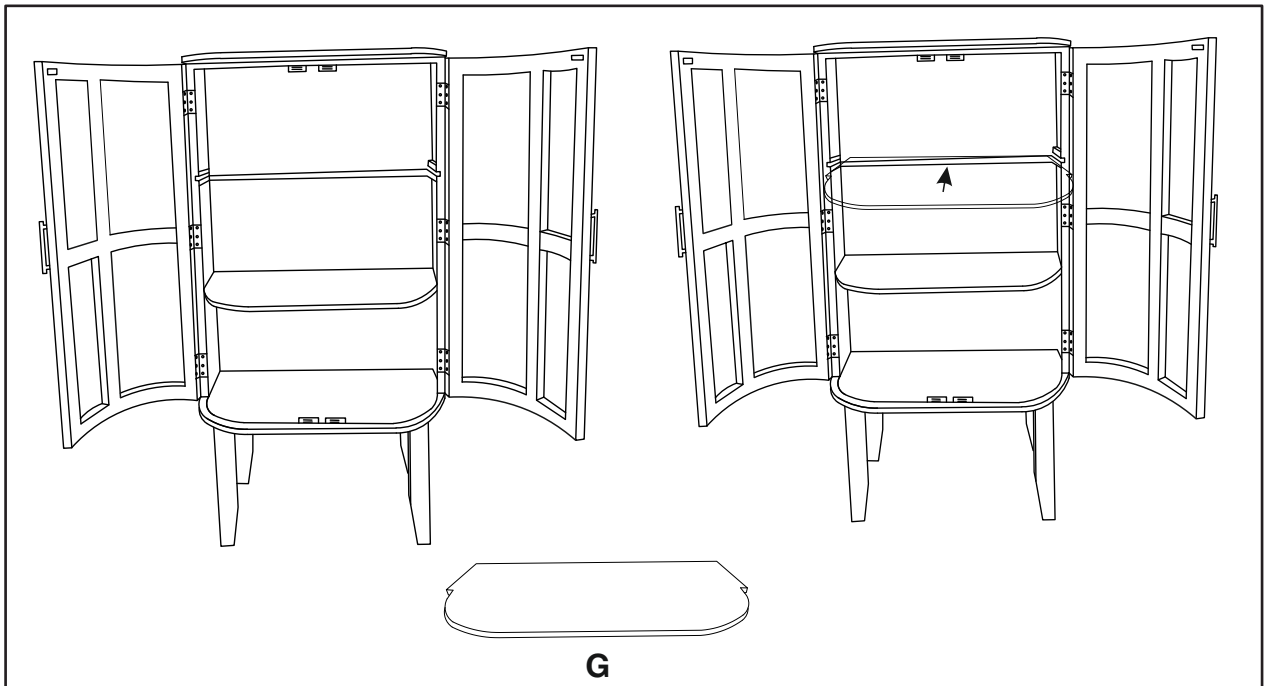

STEP5: Adjustable levelers on the bottom of each post can be used for additional leveling adjustments if needed. Assembly is now complete and the product is ready to use.

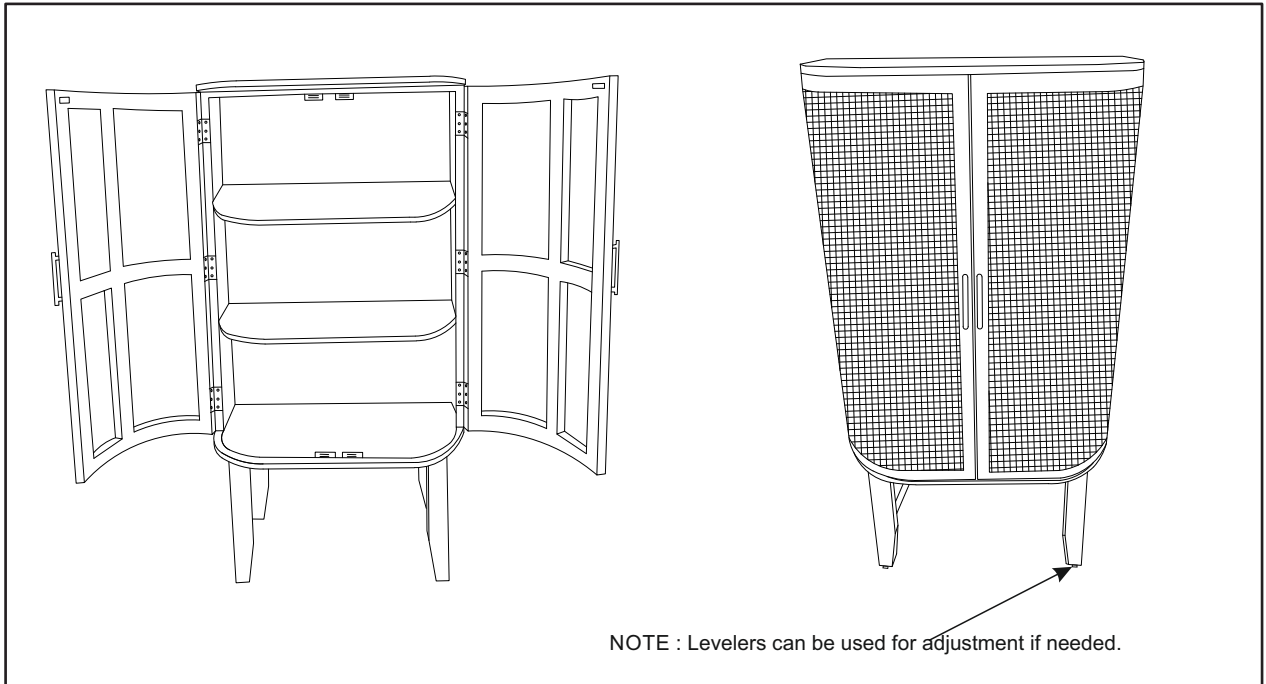

Care & Maintenance

- Lift and place the cabinet do not push on the floor.
- Do not put hot items directly on furniture surface.
- Do not clean furniture with harsh cleansers or polish.
- Do not place furniture in direct sunlight.
- Do not place furniture near heating or cooling vents.
- Do not write on furniture without a padded barrier to protect the surface.
- Do not place furniture outside. For indoor use only.
- Not for commercial use. For residential use only.
- Do not use mild soap solution and damp cloth for removing stain.
- Dust and pick-up spills using a clean, non-colored, lint-free cloth.



Safety Strap Attachment


1. Mark the location of the hole on the wall using bracket (A) approx 1" below the top of furniture. Predrill the holes at marked location & insert wall plug (E). Align bracket (A) onto wall plug (E) & secure using long screws (C).

2. Move the furniture to its final position against the wall and mark the location of the wall bracket on the back of the furniture as shown below in the image. The bracket that attaches to the furniture must go into the solid wood piece at the top, not into the thinner back panel. Move the furniture away from the wall and place a bracket (A) on the mark. Mark and drill holes for the screws using a 3/32" drill bit. Attach the brackets (A) to the furniture using the short screws (C).

3. Move the furniture to its final position, and align the bracket on the furniture with the bracket (A) on the wall. Thread the strap (D) through the bracket (A) as shown, and tighten until snug. Do not overtighten.

Important: Check that the wall bracket is firmly screwed into the stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

A 2 x Bracket

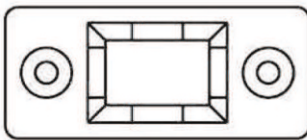


B 2 x Long Screw






C 2 x Short Screw



D 1 x Strap

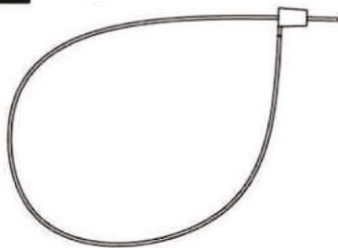

E 2 x Wall plug

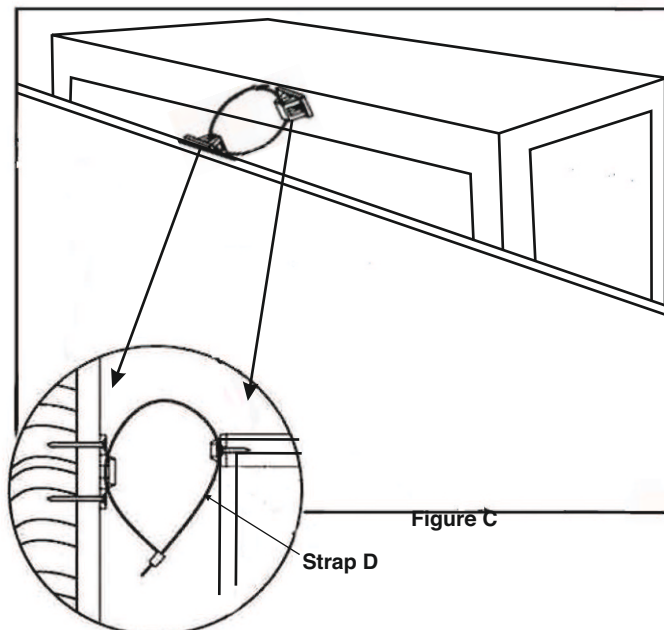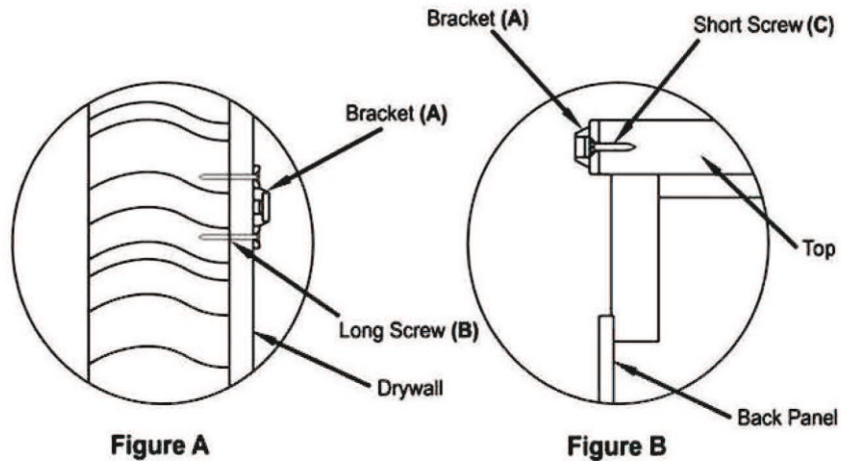

Please contact one of our Product Specialists for assembly assistance or questions at 1-800-491-4958 or email ps@grandinroad.com. Specialists are available weekdays 8:00am to 8:00pm EST or Saturday 9:30am to 6:00 pm