


grandinroad®

PRODUCT NAME : BODHI QUEEN CANE BED


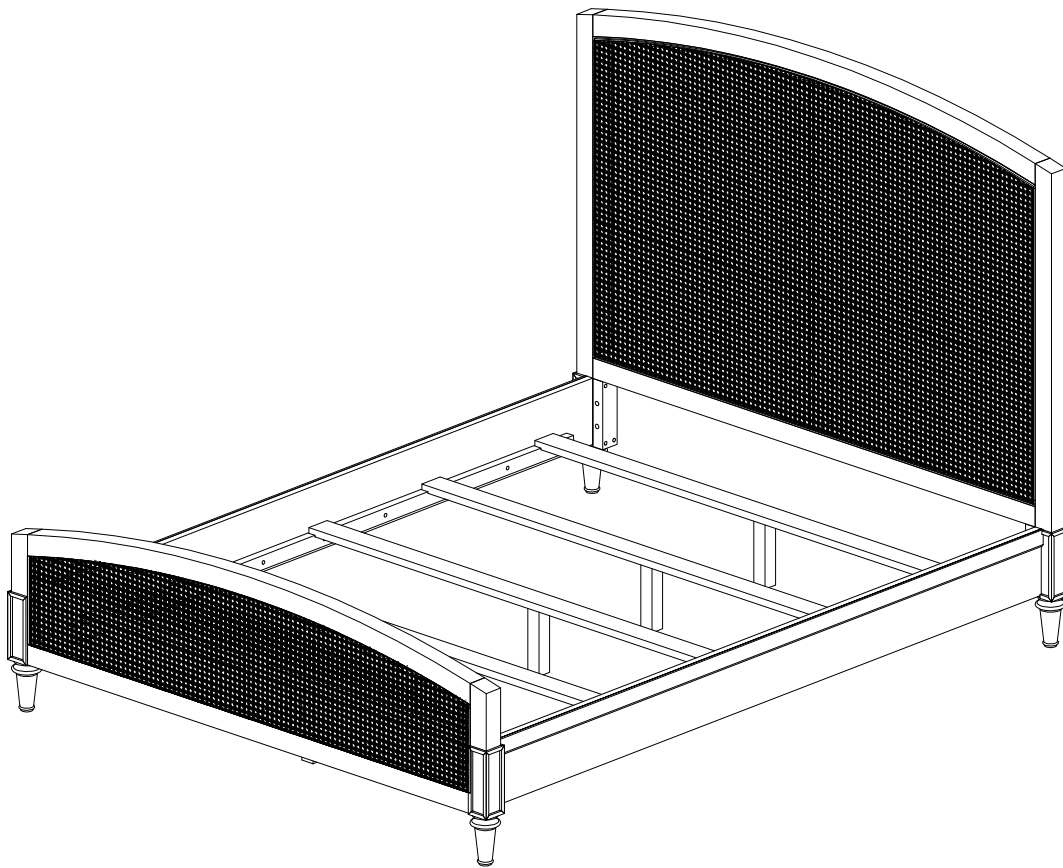


ITEM NUMBER : 173231 QUE

DIMENSION OF ITEM ASSEMBLED : W. 67.25 X D. 87.75 X H. 56.5 inch



PRODUCTS ARE NOT INTENDED
FOR COMMERCIAL USE
UPDATE: 05/03/2024





MADE IN INDONESIA




No.	Qty	Included Hardware
A	8	 HEXAGONAL BOLT M8X20 MM
B	1	 WRENCH 12 MM
C	8	 SPRING WASHER M8XØ13
D	8	 FLAT WASHER M8XØ17

Two person assembly suggested.


Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

NOTE: To avoid accidentally discarding small parts or hardware, retain all carton contents until assembly and installation are complete.

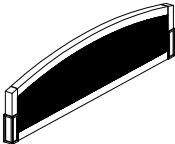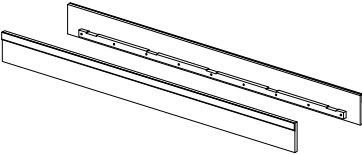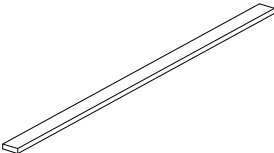
No.	Qty	Components
1	1	 HEADBOARD
2	1	 FOOTBOARD
3	2	 SIDE RAILS
4	1	 CENTER SLAT

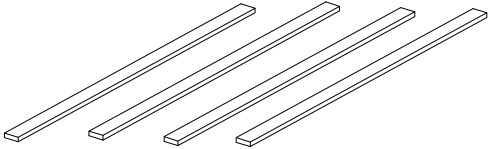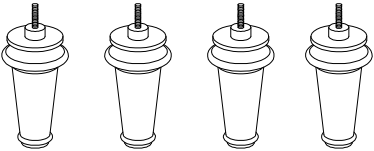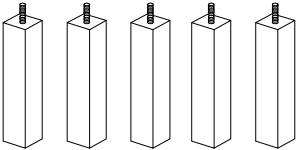5	4		END SLAT
6	4		MAIN LEG
7	5		SUPPORT LEG

1. Place Headboard (1) on a padded surface and align the threaded bolt on Main Leg (6) with holes on the Headboard (1) as shown.
2. Secure the Main Leg (6) on to the Headboard (1) by turning the Main Leg (6) clockwise until tightened.
3. Insert the Hexagonal Bolts (A), Spring Washer (C) and Flat Washer (D) in the corresponding holes on the Headboard (1) as shown. Engage all bolts (A) by hand, **DO NOT TIGHTEN THE BOLTS**, make sure to keep some space on the bolt neck for Side Rail assembly.

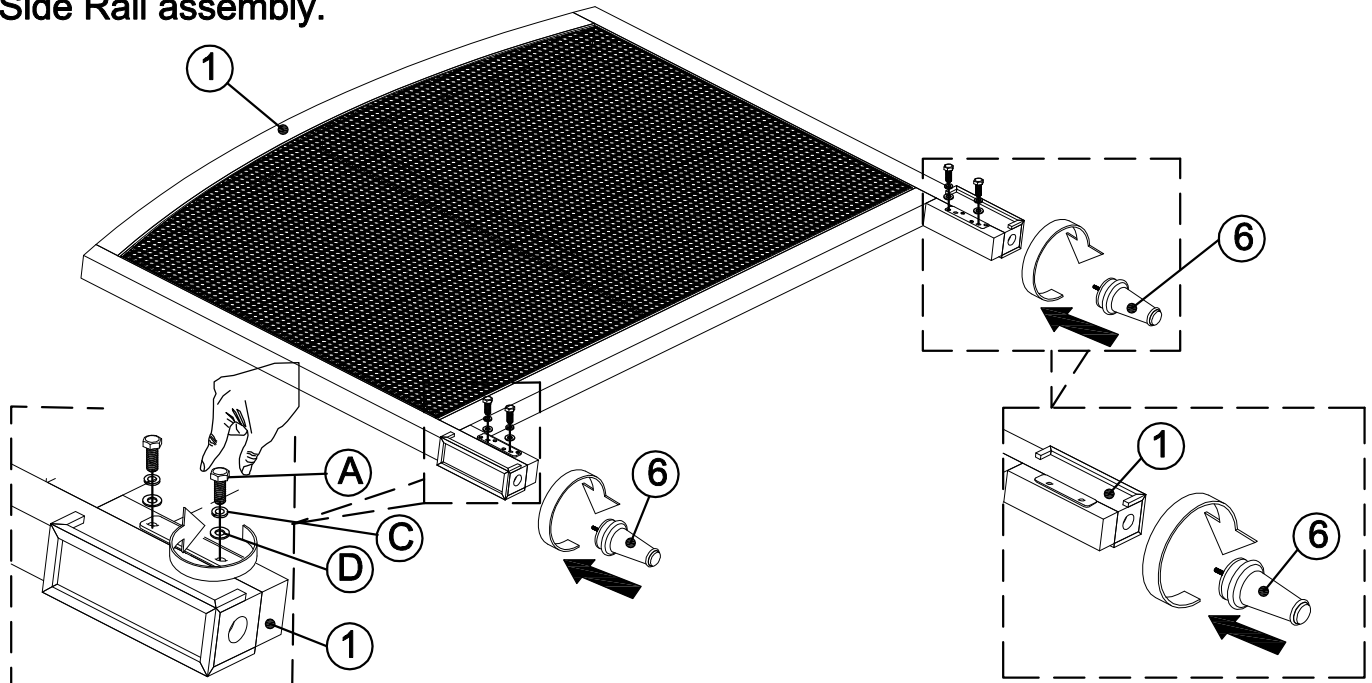


1. Place Footboard (2) on a padded surface and align the threaded bolt on Main Leg (6) with holes on the Footboard (2) as shown.
2. Secure the Main Leg (6) on to the Footboard (2) by turning the Main Leg (6) clockwise until tightened.
3. Insert the Hexagonal Bolts (A), Spring Washer (C) and Flat Washer (D) in the corresponding holes on the Headboard (1) as shown. Engage all bolts (A) by hand, **DO NOT TIGHTEN THE BOLTS**, make sure to keep some space on the bolt neck for Side Rail assembly.

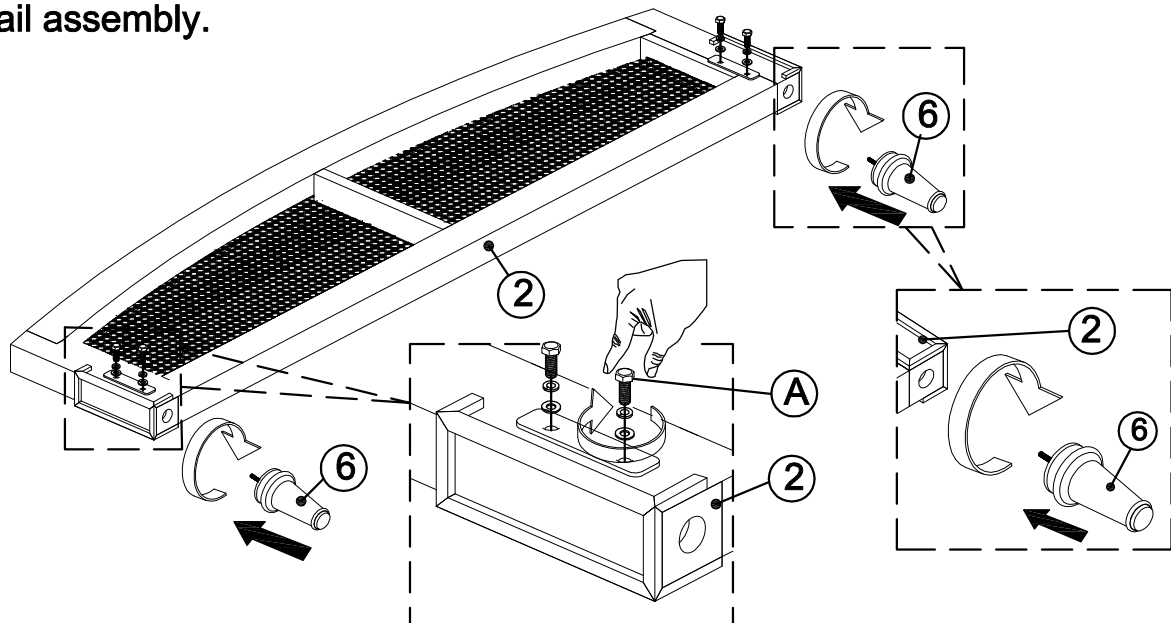


1. Using a second person to assist you, turn the Headboard (1) upright then put the metal hook on the Side Rail (3) onto bolt neck which was attached on the Headboard (1) as shown. The metal hook is placed between metal plate on Headboard (1) the Flat Washer (D).

2. DO NOT FULLY TIGHTEN THE BOLTS AT THIS STEP.

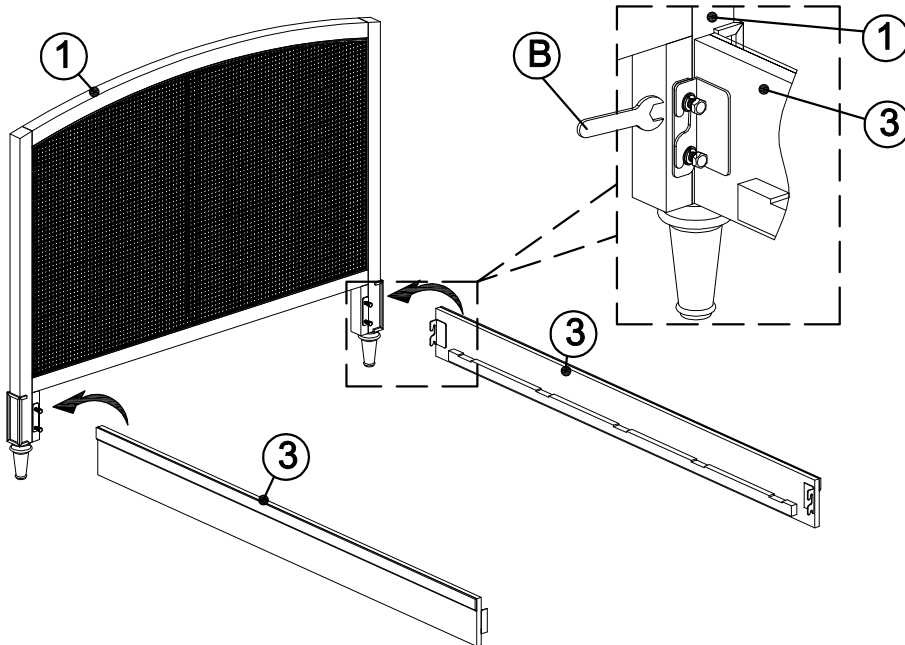


Note

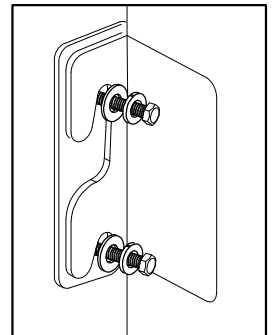


1. Put the metal hook on the other end of Side Rail (3) onto bolt neck which was attached on the Footboard (2) as shown. The metal hook is placed between metal plate on Footboard (2) and the Flat Washer (D).


2. FULLY TIGHTEN ALL HEXAGONAL BOLTS on Headboard (1) and Footboard (2).

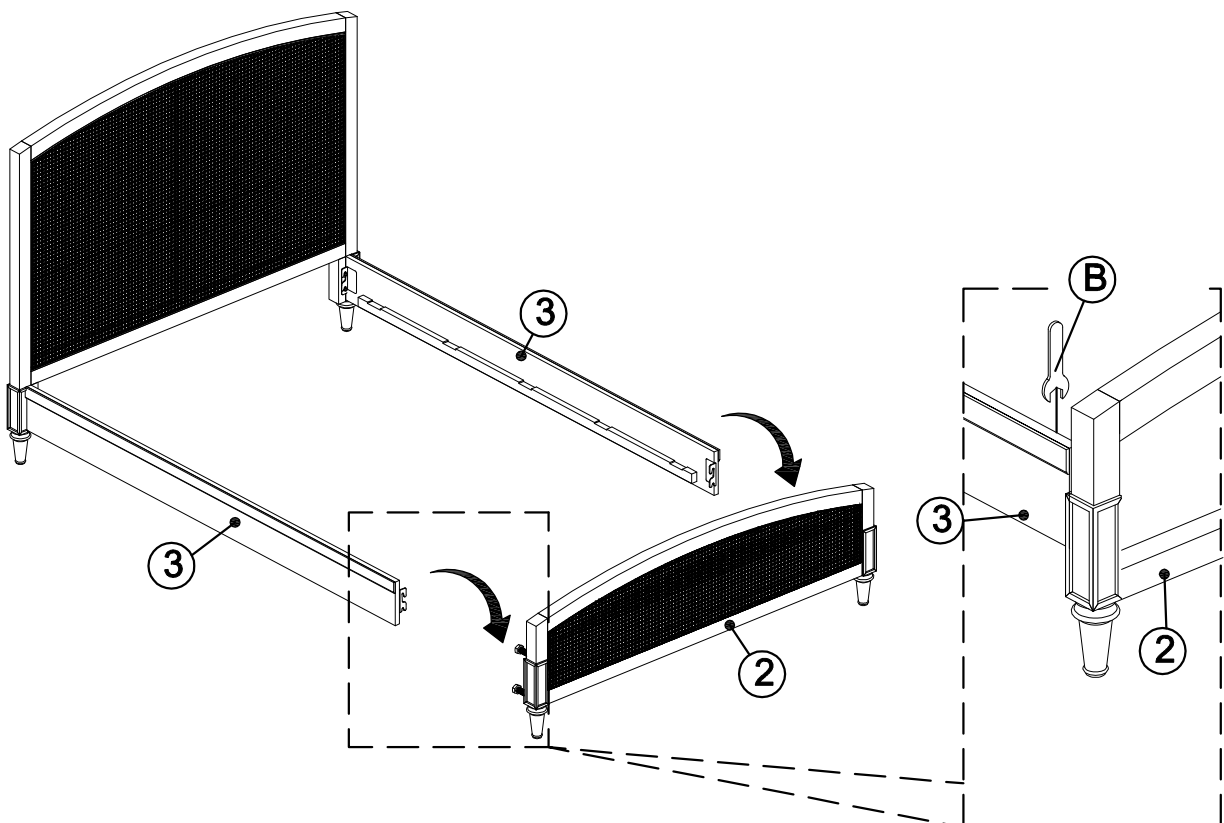


1. Align holes on the Center Slat (4) and threaded bolt on the Support Leg (7)
2. Secure the Support Leg (6) on to the Slat (4) by turning the Support Leg (7) clockwise until tightened.

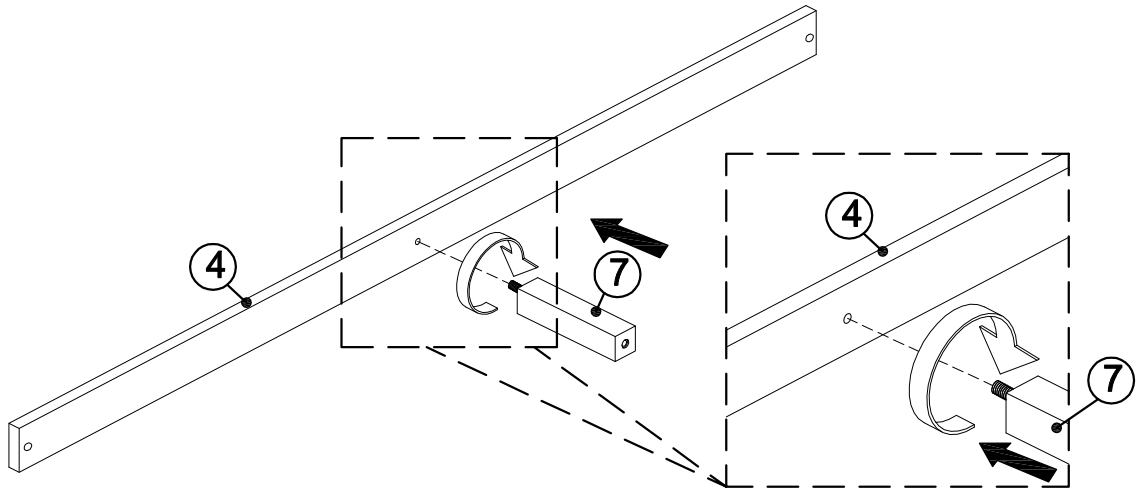

1. Align holes on the End Slats (5) and threaded bolt on the Support Leg (7)
2. Secure the Support Leg (7) on to the Slats (5) by turning the Support Leg (7) clockwise until tightened.

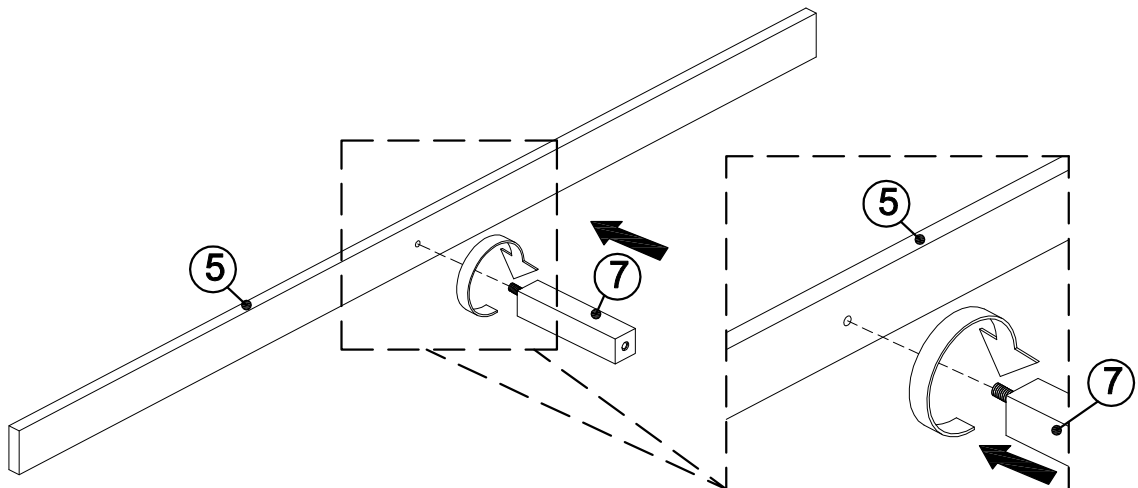

1. Align the dowel on center of Side Rails (3) with corresponding holes on Center Slat (4) as illustrated below.
2. Place the End Slat (5) on to Side Rails (3) as shown. Assembly is completed.

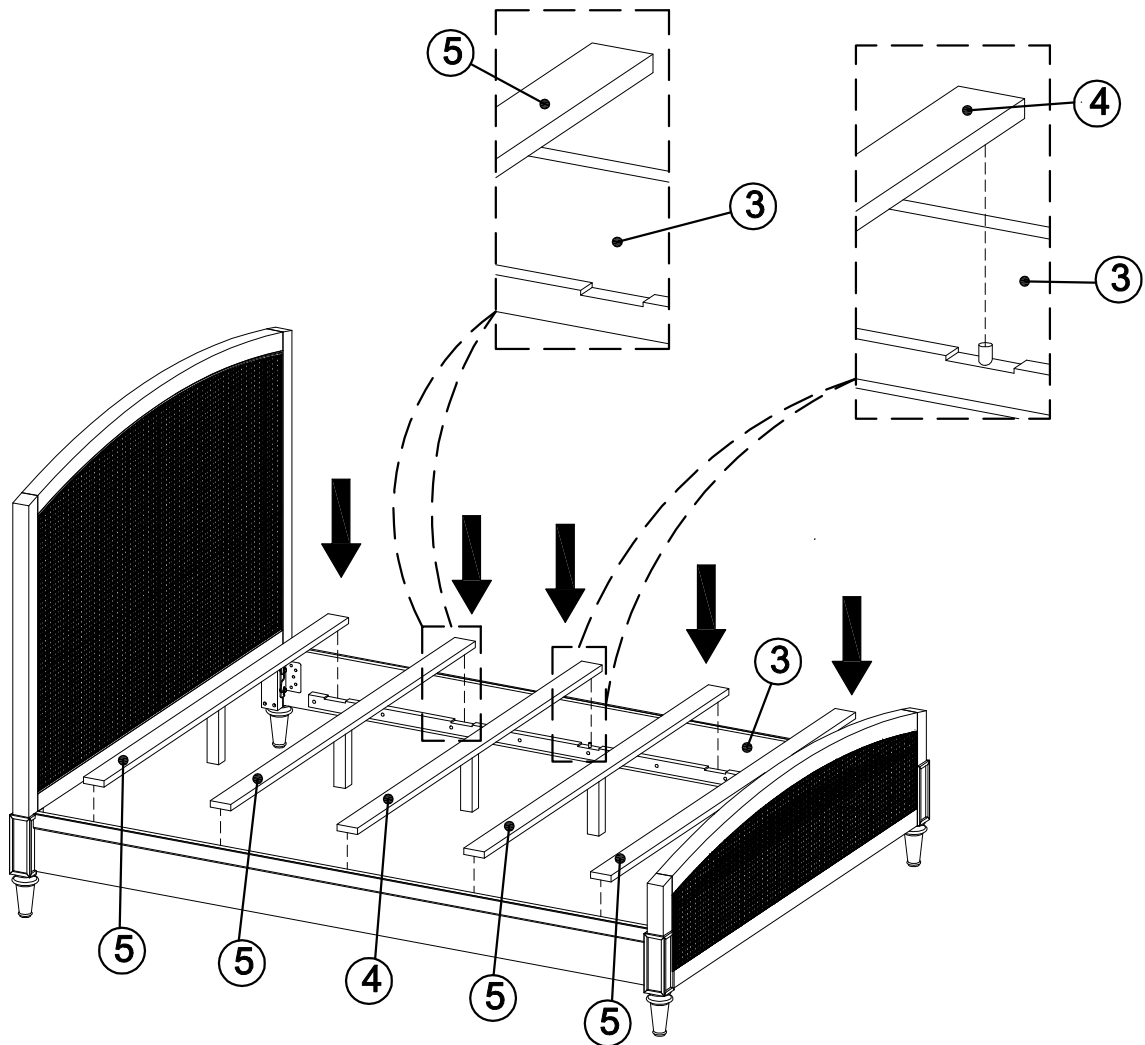

Please contact one of our Product Specialist for assembly assistance or questions at 1.800.491.4958 or email ps@grandinroad.com. Specialists are evaliable weekday 8:00 a.m. to 8:00 p.m. EST or Saturday 9:30 a.m. to 6:00 p.m.